



<p>说明书材质要求: 105g 有光铜版纸</p>	<p>说明书成品尺寸: 50x110mm</p>
<p>第一, 专色用6级防晒油墨+CMYK油墨要求。</p> <p>1. PANTONE137C专色油墨(专色用6级防晒油墨): 如果自己配色, 油墨配比为: 酒联中黄(防晒)2000g 酒联金红(防晒)225g</p> <p>2. C色油墨: 酒联天蓝墨</p> <p>3. M色油墨: 酒联金红墨</p> <p>4. Y色油墨: pantone123C专色油墨</p> <p>5. K色油墨: 酒联黑墨</p>	<p>第二, 特别注意:</p> <p>1. 印刷时看样请参考我司提供的实物样品颜色。不得偏色</p> <p>2. 137C的专色不得参考C=0, M=35, Y=90, K=0对应的四色色谱颜色来看样印刷</p> <div style="display: flex; align-items: center;"> <div style="width: 20px; height: 20px; background-color: #FFD700; margin-right: 5px;"></div> <div>Pantone 137C</div> </div> <div style="display: flex; align-items: center;"> <div style="width: 20px; height: 20px; background-color: black; margin-right: 5px;"></div> <div>Black (两色印刷)</div> </div>
<p>折叠方式: 风琴折(燕尾)</p> <p>特殊说明: 16P/20P: 风琴折+对折</p>	<p>备注:</p>

特别注意：此页内容不印刷

风琴折 + 对折 页面顺序

16P 页面顺序

9	10	11	封面
12	13	14	封底

1	2	3	4
5	6	7	8


20P 页面顺序

11	12	13	14	封面
15	16	17	18	封底

1	2	3	4	5
6	7	8	9	10

更改记录	1. 新制作				
	0724.V01	2024.07.29	ZY		
	版本号	日期	设计师		

TEST PENCIL

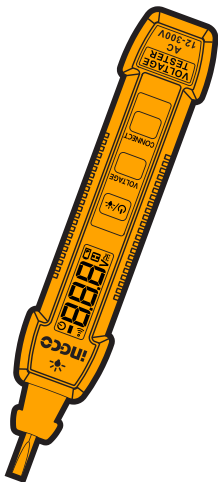

HSDT33001



Original Instructions

GENERAL TOOL SAFETY WARNINGS

Safety statement

CAUTION!

This symbol indicates conditions and operations that will cause damage to the instrument or equipment.

WARNING!

This symbol indicates conditions and operations that are dangerous to the user.

Safety Instructions

To avoid possible electric shock or personal injury:

- The protection provided by the stylus can be compromised or rendered useless if you fail to use it according to instructions.
- Before using the voltage detector, please test on a

known live power supply to ensure that the detector is in good working condition.

- When using voltage detector, even if there is no indication or no sound alarm, there may be a voltage. Do not use the product if it is damaged or does not work properly. If any problem is suspected, please send it to repair in time.
- Do not apply more than the rated voltage marked on the probe.
- When testing voltages above 30 volts, be extra careful, because such a voltage will pose a risk of electric shock.
- Comply with local and national safety regulations and use appropriate protective equipment as required by local or national authorities.
- The meter can only be used with the equipped test leads


to meet the requirements of safety standards. If the test leads are damaged and need to be replaced, they must be replaced with test leads of the same model and the same electrical specifications.

THE SYMBOLS IN INSTRUCTION MANUAL

	Warning message
	Low battery
	Conforms to European Union directives
	This additional product label indicates that this electrical/electronic product must not be discarded in household waste.

SPECIFICATIONS

Instrument panel

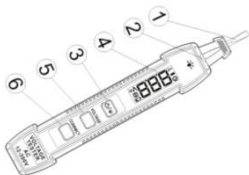

Components

1. Probe (NCV sensor)
2. Flashlight
3. Power/light switch
4. Display
5. AC test button
6. Conduction/Positive measurement switch

Technical specifications

Operating voltage:

AC Voltage: 12~300 V, 50/60 HZ

Measurement error: $\pm(5\%+3)$

Application environment:

Operating temperature: 0~40°C

Storage temperature: -10~50°C

Humidity: $\leq 95\%$

Altitude: $\leq 2000\text{m}$

Safety compliance:

CAT.II 300V

Battery: 1x1.5V AAA

FUNCTIONAL OPERATIONS

Power On/ Off

Press the power key and keep up for more than 1 second, the buzzer deeps and the screen lit up then entered the open state. When the meter is turned on, press the power key and keep up for more than 1 second, meter turn off.

Flashlight

When the meter powered on,

press the “power/light” button to turn on the flashlight; when the flashlight is turned on, press the “power /light” button again to turn it off.

The meter will be turned off automatically after 5 minutes when there is no induction signal and no operation.

Inductive mode measuring

Power-on default sensing mode measurement status. When the probe of the test pen is placed close to the AC voltage source, the buzzer sounds; the frequency of the buzzer sounds has three levels, which increases with the signal. At the same time, the display screen will display “— — U” , and “HI” when the signal is strong. With this function, you can find the break point of the wire.

AC Voltage detection

After starting up, press and hold the contact measurement key to enter the AC voltage measurement mode. When the probe of the test pen contacts the conductor with AC voltage, the display screen displays the corresponding AC voltage. This function can detect the AC voltage and distinguish the zero and live wires according to the voltage.

Connected the wire

After the machine is turned on, press the test pen conduction/positive pole measurement button with the right hand, hold one end of the uncharged wire with the left hand, contact the other end of the wire with the probe of the test pen, if the wire is connected normally, the display will display the "- - C" and buzzer sound, if

the wire is open, the test pen does not respond.

Battery positive detection

After starting up, press and hold the connection/positive pole measurement key of the test pen with the right hand and the negative pole of the battery with the left hand; use the probe of the test pen to touch the positive pole of the battery. If it is normal, the display screen will display "— — P" and the buzzer will sound. If it is connected reversely, the test pen will not respond.

In general, when the backlight is red, it indicates that the object under test may be dangerous and should be operated carefully.

WARNING!

- **When using, please ensure that the human body is insulated to the earth,**

please wear well-insulated shoes; a certain part of the human body contact with an electrified object, large areas of metal, or the Earth, will affect the accuracy of the measurement.

- This product can only be used to measure the AC city voltage, such as the measurement of other processed power supply voltage, the measurement deviation is large.
- Due to the different structure of the socket, when the zero and live wires cannot be distinguished by the induction mode, it can be switched to the AC voltage detection mode, which can generally be distinguished according to the voltage detected by the electric pen.
- When the induction mode is

used to distinguish the zero and live wires: if the zero and live wires are very close, separate the two wires as far as possible for detection; if it is impossible to separate them, distinguish them according to the strength of the detected signal, the one with strong signal is the live wire, and the one with weak signal is the zero wire.

- As the detector measurement requires human contact to form a loop, please ensure that your fingers can touch the detector keys well.
- Because the induction mode of the electric pen has high sensitivity, it can sense the weak electric field signal, so it is normal to trigger the induction when the metal detector

contacts the object with the weak electric field directly.

Auto power Off

 
After about 5 minutes without any operation and No signal detection, the voltage detector will be automatically shut down to extend the battery life.

Low battery indicates

When the battery voltage drops to less than 1.2 volts, the display will display "  " symbol. When low battery tip, please replace the battery.

MAINTENANCE&CLEAN

Push off the battery cover as shown below, then take out the old battery, and install the new battery according to the positive and negative indications of the battery.




⚠ WARNING!

To avoid electric shock, do not use a voltage probe to detect the voltage before the battery cover is fastened and locked. In order not to affect the detection, please ensure that the human body is insulated from the ground.

Clean Indication

Clean with a wet cloth.

Notes: After cleaning, the voltage detector can't be used until it is completely dry.

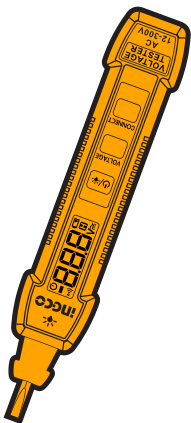

PAP